



ASENNUSOHJE

SÄÄTÖOHJE

HUOLTO-OHJE

MONTERINGSANVISNING

INJUSTERINGSANVISNING

SKÖTSELANVISNING

INSTALLATION

ADJUSTMENT







MAINTENANCE

ИНСТРУКЦИЯ ПО УСТАНОВКЕ

ИНСТРУКЦИЯ ПО НАСТРОЙКЕ

РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ

ИНСТРУКЦИЯ ПО УСТАНОВКЕ

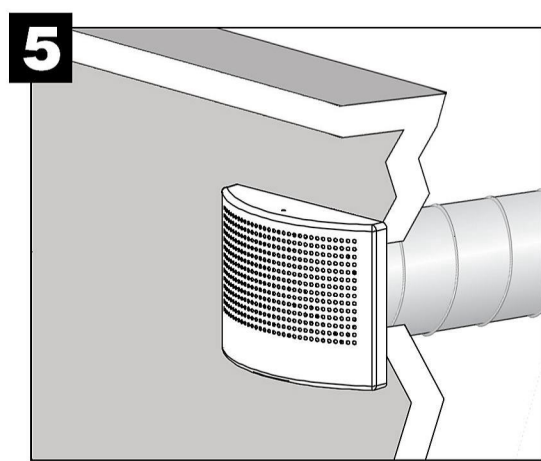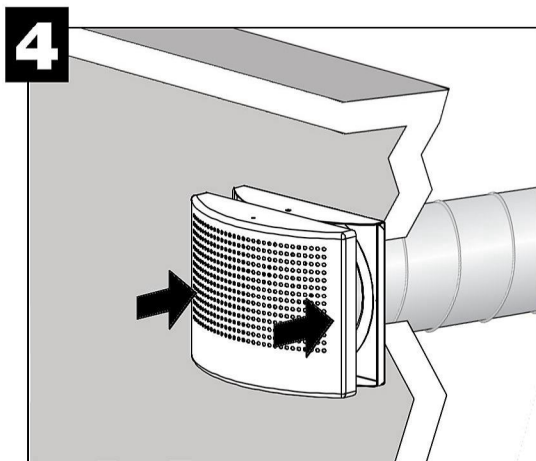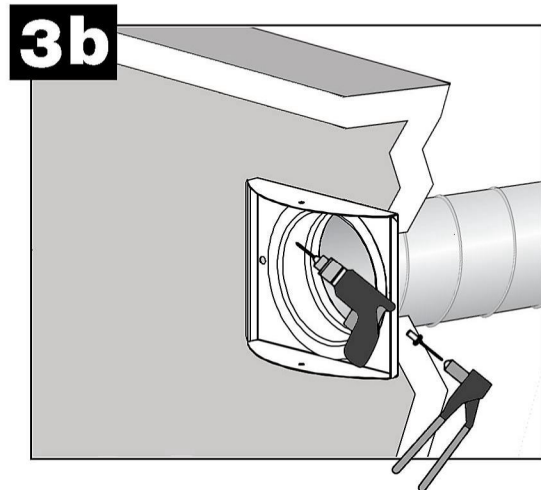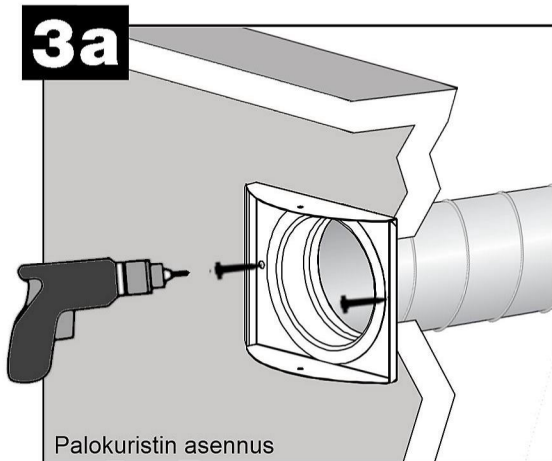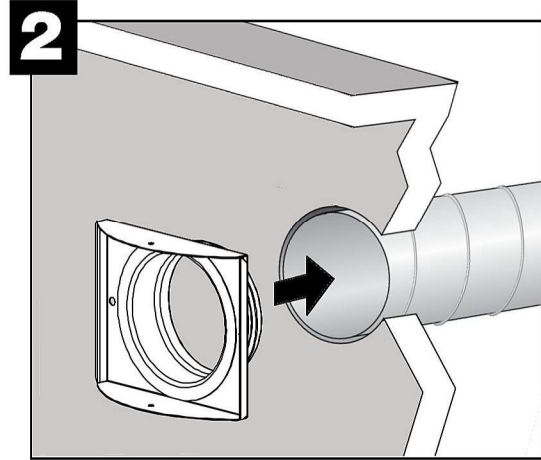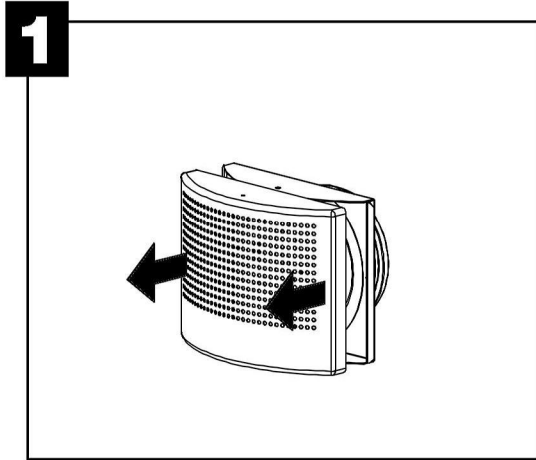

Huom!

Savunrajoittimien asennusohjeet ja asennustodistus löytyy osoitteesta www.climecon.fi

ИНСТРУКЦИЯ ПО НАСТРОЙКЕ




$$q_v = k \times \sqrt{\Delta p_m}$$

$$q_v = l/s$$

$$\Delta p_m = Pa$$

LINO		k	
		100	125
		14*31	14*31
Suljettu riviä Stängda rad Closed rows	0	4,2	4,2
	2	3,6	3,6
	4	3,0	3,0
	6	2,2	2,2
	8	1,6	1,6
	10	1,1	1,1
	12	0,5	0,5

LINO-W		k	
		100	125
		14*31	14*31
Suljettu riviä Stängda rad Closed rows	0	4,0	4,0
	2	3,4	3,4
	4	2,9	2,9
	6	2,2	2,2
	8	1,6	1,6
	10	1,1	1,1
	12	0,5	0,5

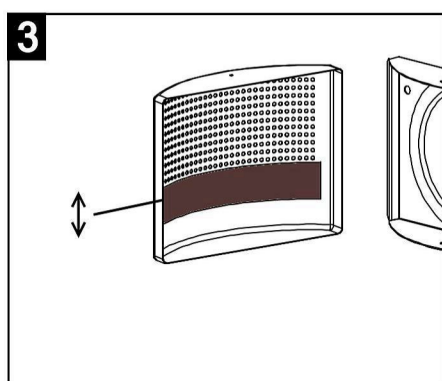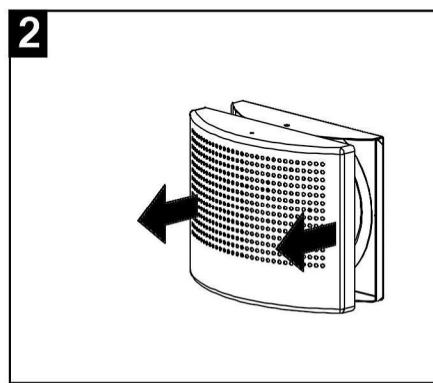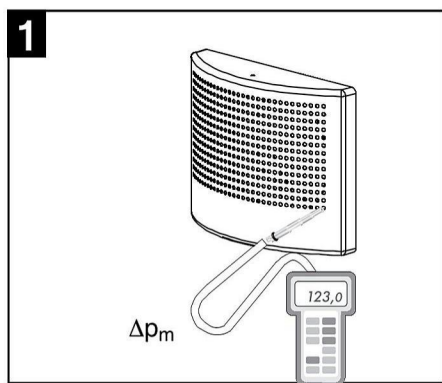

РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ

